


Thank you for purchasing this AUTEL Storage Cabinet. This Quick Reference Guide instructs you on how to install and use the cabinet. Please read this guide carefully before use.

Product Description



 
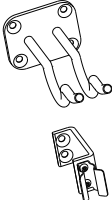
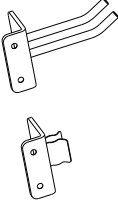
The cabinet has three drawers. Each drawer can be used to store a variety of things:

- 1. Printer
- 2. Cartridge
- 3. A4 Paper
- 4. Wide Angle Targets
- 5. Extensions for Wide Angle Target
- 6. Live Ride Height Targets
- 7. Wheel Chocks and Other Auxiliary Tools

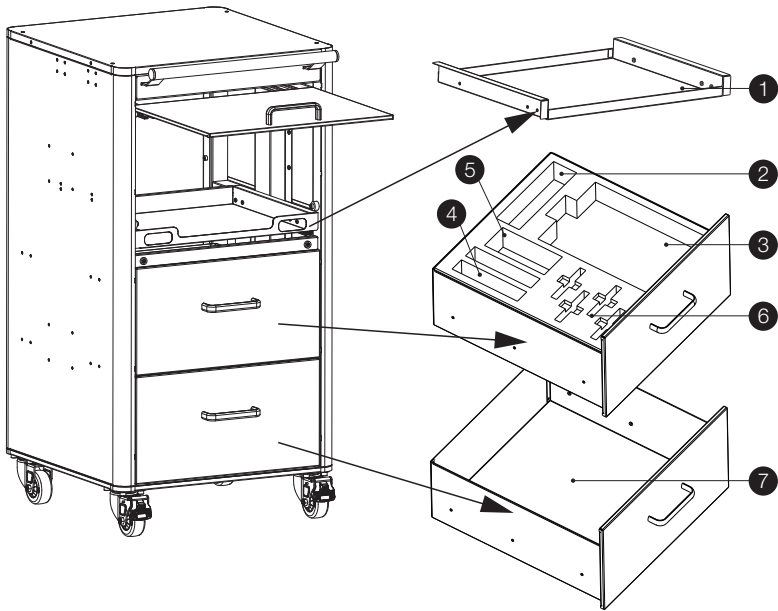

 **NOTE:** The tools listed above are not included in the package.


The cabinet comes with several accessories and tools required for installation:

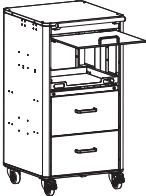Cabinet 1 PC		Allen Key (2.5 mm) 1 PC		Socket Countersunk Head Screw (M4 x 6) 12 PCS (2 Spares Included)	
Steering Wheel Lock Holder 1 SET		Brake Pedal Depressor Holder 1 SET			

There are two combination options when coming with this storage cabinet.




Option A: Storage cabinet + rim clamp hook set.

Option B: Storage cabinet + tire clamp hook set.

 **NOTE:** Before beginning the installation, ensure that the two footbrakes on the casters are engaged and that the cabinet is in a fixed position.


● If the rim clamp hook set is purchased, please follow the steps below to install the tools.

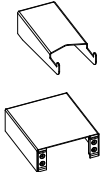Rim Clamp Hooks

Rim Clamp Hook 4 SETS		Allen Key (4 mm) 1 PC		Socket Head Combination Screw (M5 x 10) 18 PCS (2 Spares Included)	
---------------------------------	---	---------------------------------	--	---	---


Installing the Rim Clamp Hooks

Locate the pre-drilled holes for the rim clamp hooks. Use the 4 mm Allen key and socket head combination screws (M5 x 10) to install the rim clamp hooks. Four screws are required for installing each set of rim clamp hooks.

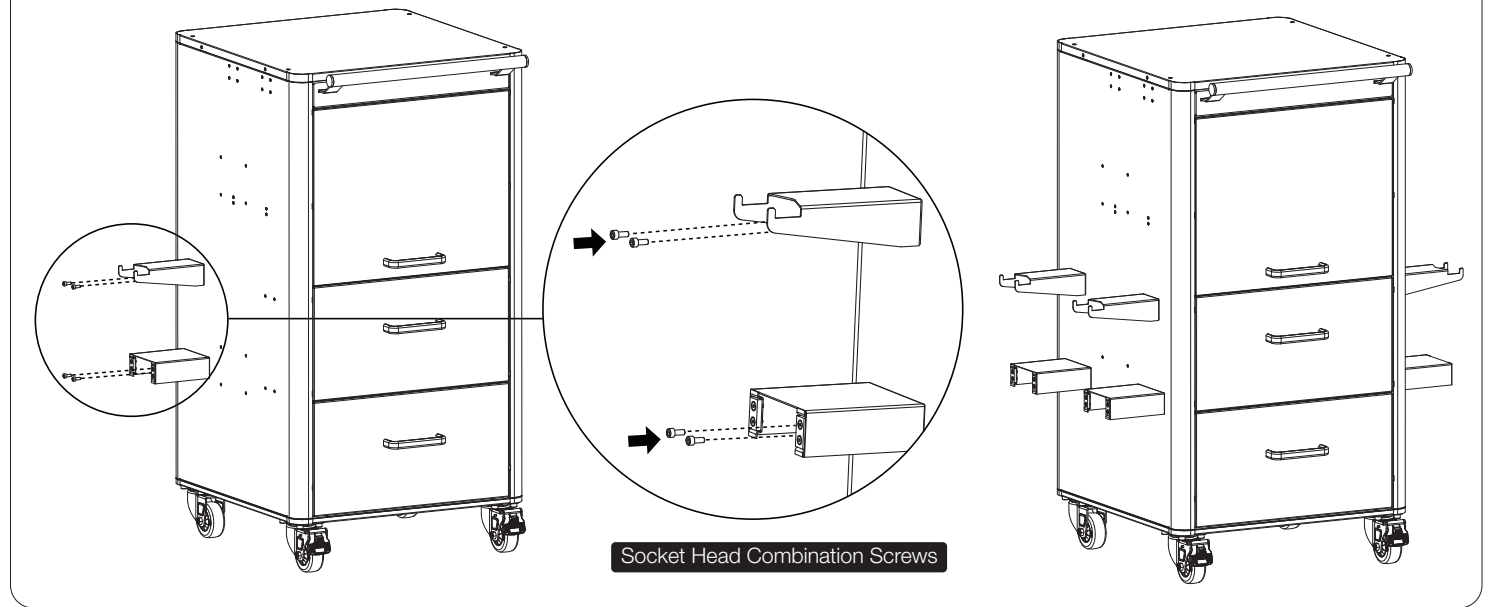


Hanging the Rim Clamps

After the rim clamp hooks are securely installed, you can hang the rim clamps on them as illustrated below. To correctly hang a rim clamp AUTEL-CSC0500/19 (sold separately) on the hooks, put the handle on the holders, and secure the magnets on the rim clamp to the magnets on the hook.

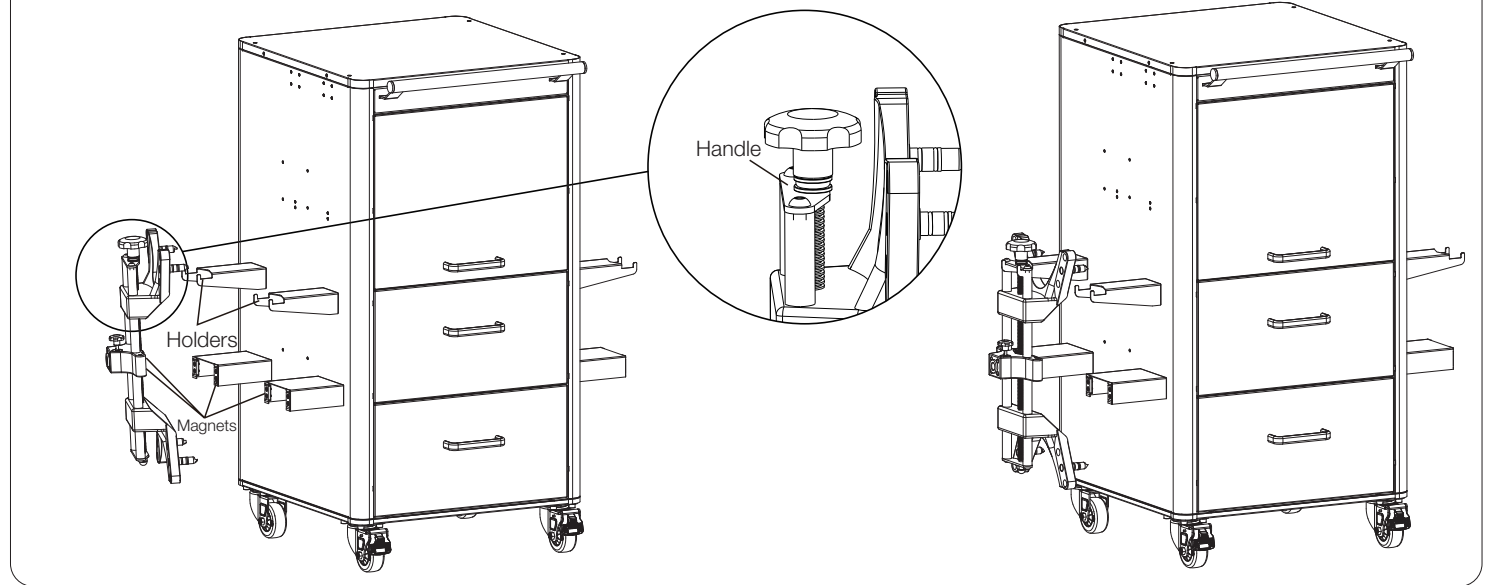


Installing the Steering Wheel Lock Holder

Facing the front of the cabinet (the side with drawers), the pre-drilled holes for the steering wheel lock holder are located on the cabinet's left side. Use the 2.5 mm Allen key and six socket countersunk head screws (M4 x 6) to install the steering wheel lock holder.

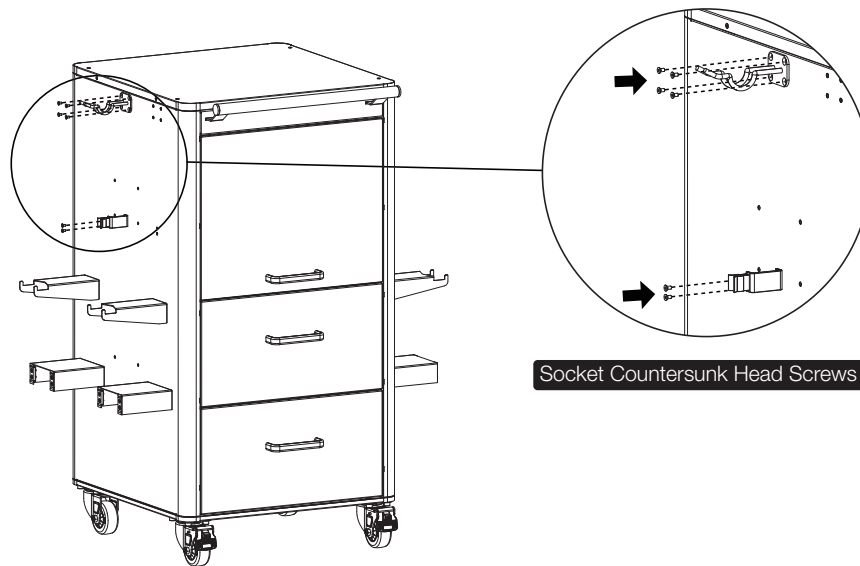


Hanging the Steering Wheel Lock

Hang the steering wheel lock AUTEL-CSC0500/27 (sold separately) on its holder for easy storage as shown below.

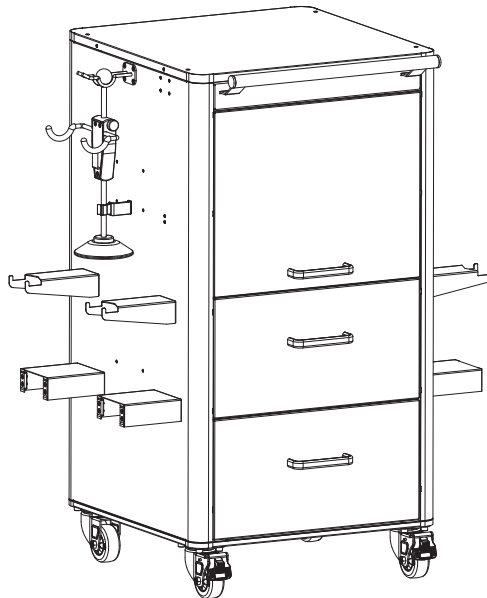


Installing the Brake Pedal Depressor Holder

Facing the front of the cabinet (the side with drawers), the pre-drilled holes for the brake pedal depressor holder are located on the cabinet's right side. Use the 2.5 mm Allen key and four socket countersunk head screws (M4 x 6) to install the brake pedal depressor holder.

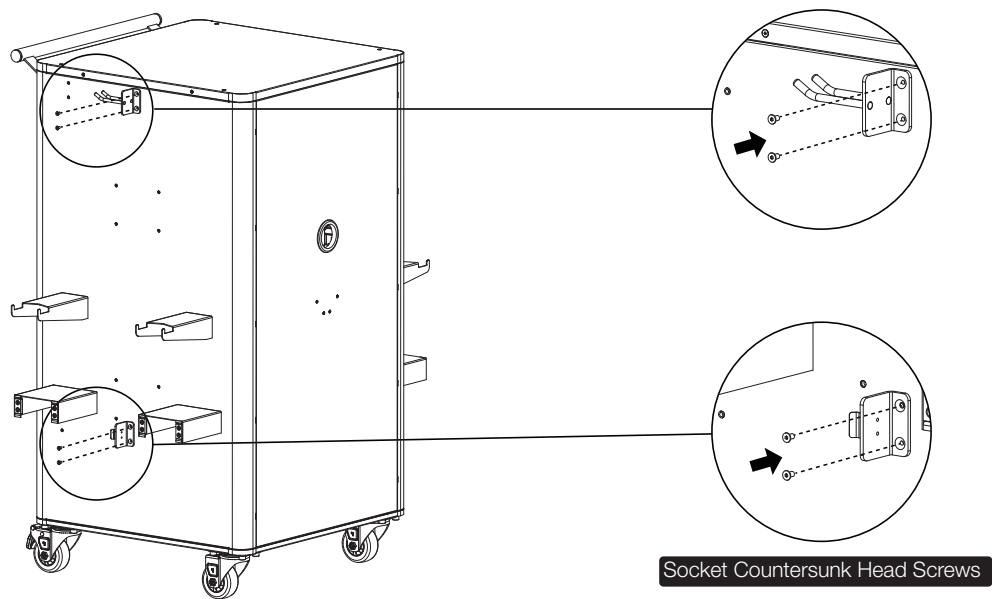




Hanging the Brake Pedal Depressor

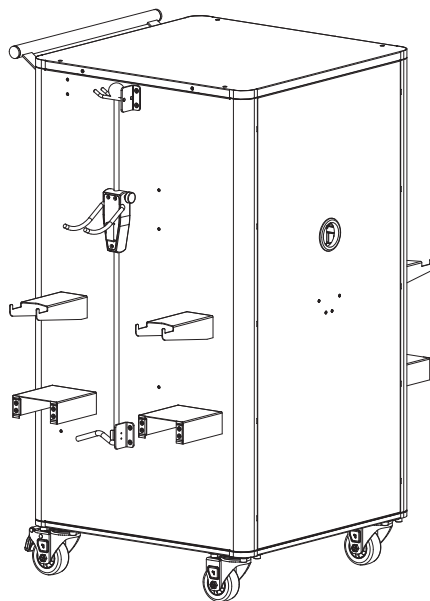Hang the brake pedal depressor AUTEL-CSC0500/26 (sold separately) on its holder when not in use.




- If the tire clamp hook set is purchased, please follow the steps below to install the tools.

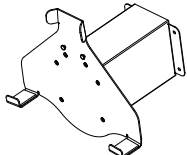Tire Clamp hooks

Tire Clamp Hook 4 PCS		Allen Key (4 mm) 1 PC		Socket Head Combination Screw (M5 x 10) 18 PCS (2 Spares Included)	
---------------------------------	---	---------------------------------	--	---	---


Installing the Tire Clamp Hooks

Locate the pre-drilled holes for the tire clamp hooks. Use the 4 mm Allen key and socket head combination screws (M5 x 10) to install the tire clamp hooks. Four screws are required for installing each tire clamp hook.

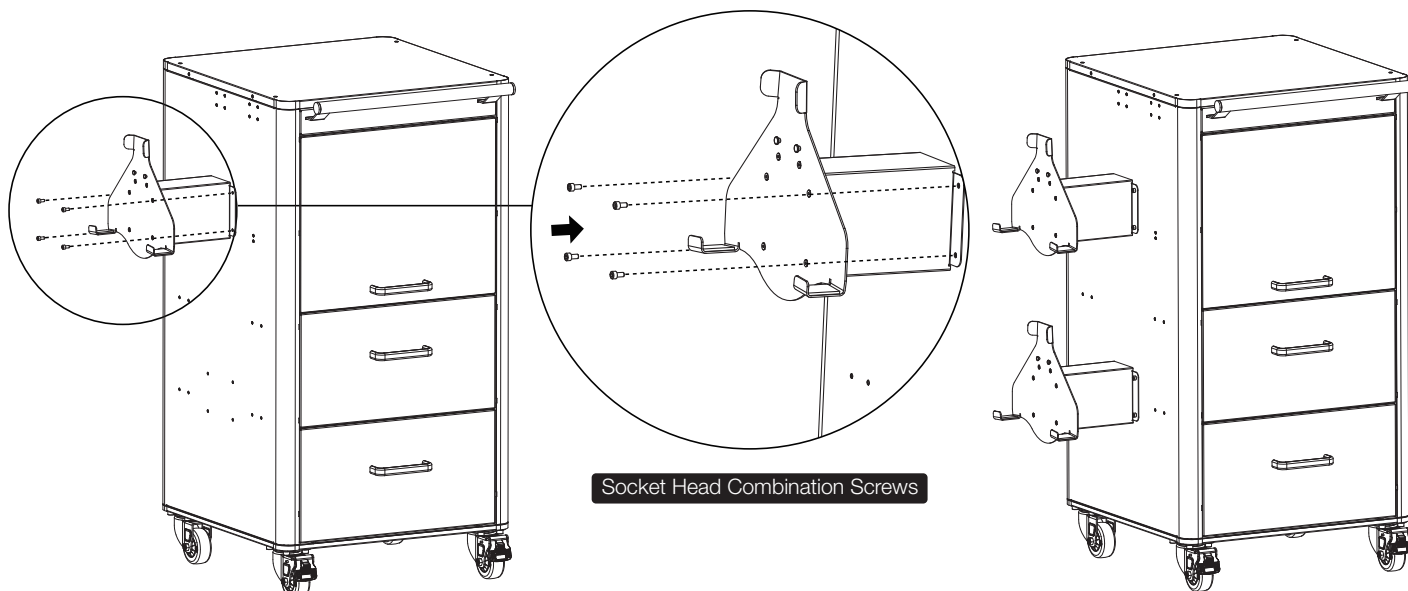


Hanging the Tire Clamps

After the tire clamp hooks are securely installed, you can hang the tire clamps on them as illustrated below. To correctly hang the tire clamps AUTEL-CSC0500/17 (sold separately) on the hooks, ensure that the holders on the hooks are inserted into the mounting holes on the back of the tire clamps.

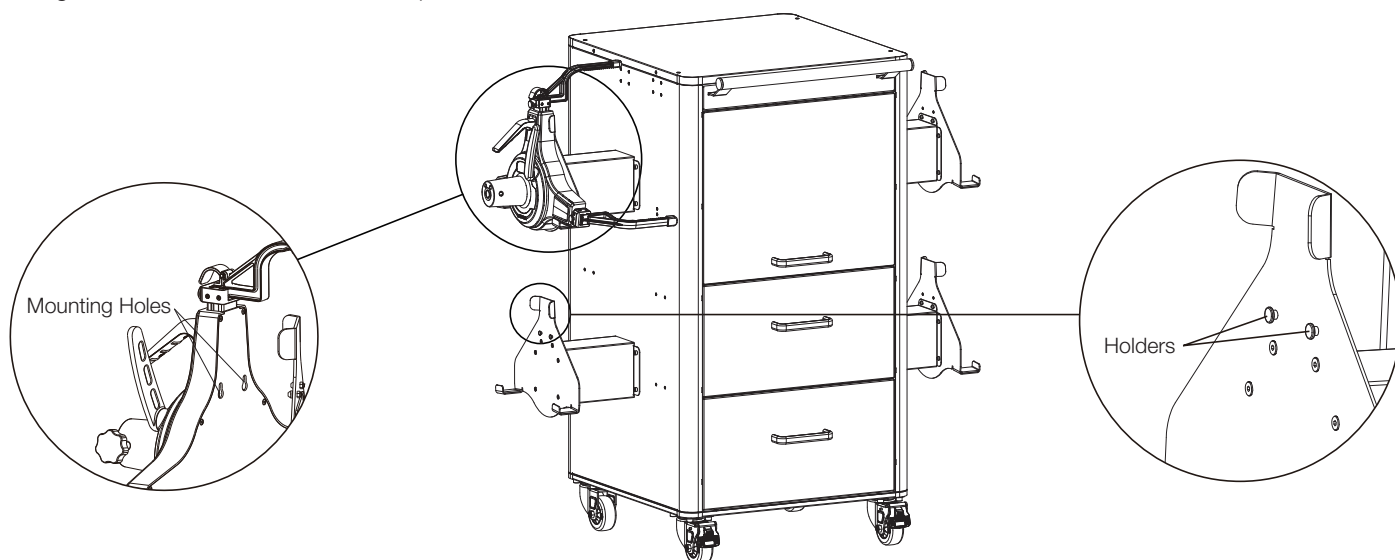


Installing the Steering Wheel Lock Holder

Facing the front of the cabinet (the side with drawers), the pre-drilled holes for the steering wheel lock holder are located on the cabinet's left side. Use the 2.5 mm Allen key and six socket countersunk head screws (M4 x 6) to install the steering wheel lock holder.

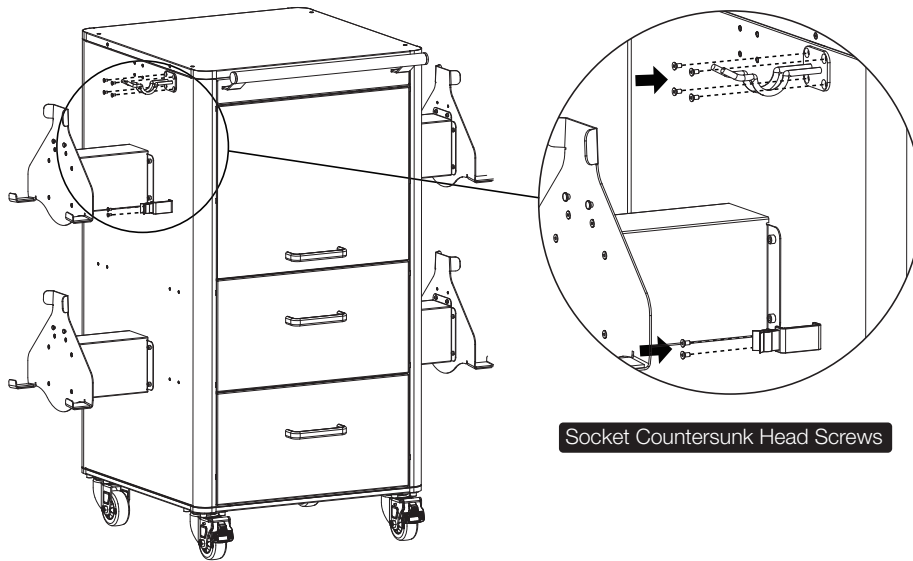


Hanging the Steering Wheel Lock

Hang the steering wheel lock AUTEL-CSC0500/27 (sold separately) on its holder for easy storage as shown below.

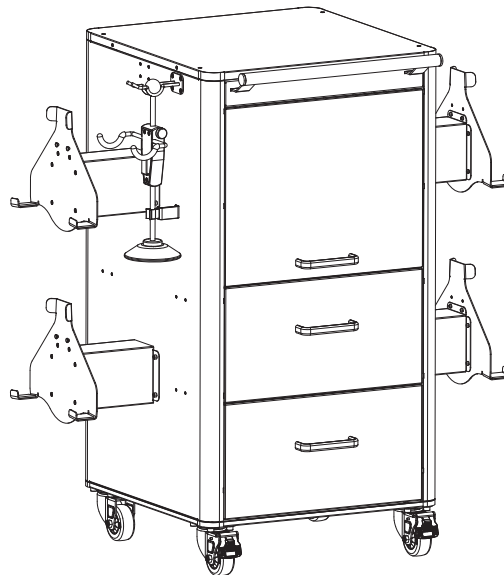


Installing the Brake Pedal Depressor Holder

Facing the front of the cabinet (the side with drawers), the pre-drilled holes for the brake pedal depressor holder are located on the cabinet's right side. Use the 2.5 mm Allen key and four socket countersunk head screws (M4 x 6) to install the brake pedal depressor holder.

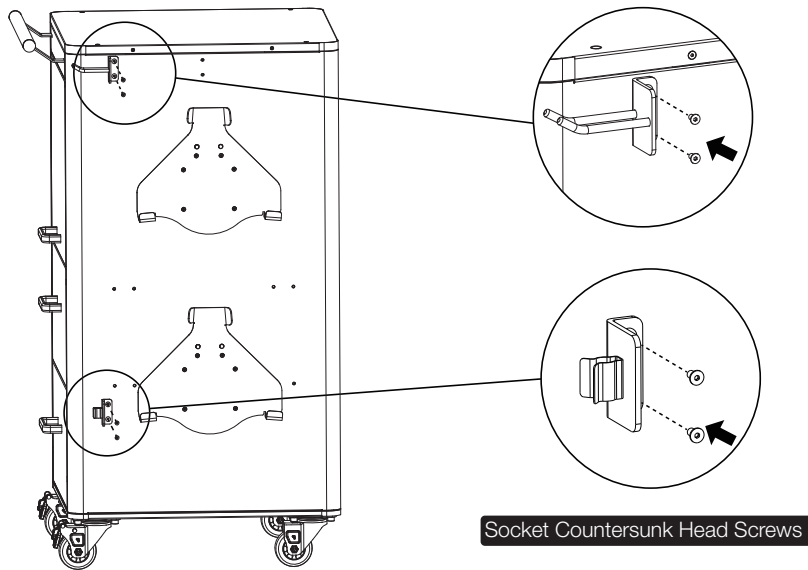

Hanging the Brake Pedal Depressor

Hang the brake pedal depressor AUTEL-CSC0500/26 (sold separately) on its holder when not in use.

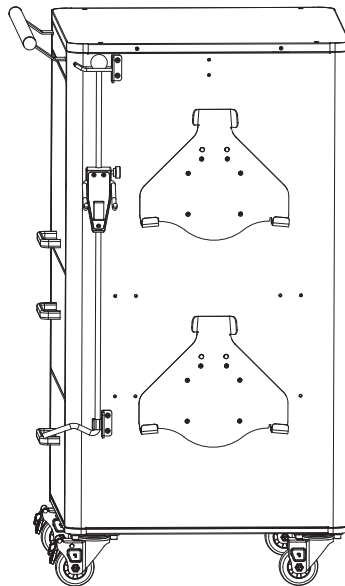

NOTE: The illustrations in this Quick Reference Guide are for reference only. The actual products may differ.