



Connect the Calibration Frame via Wi-Fi

1

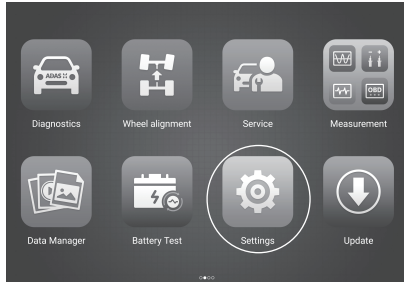


Turn on the MaxiSys tablet. Tap the **Settings** application on the MaxiSys Job Menu.

2

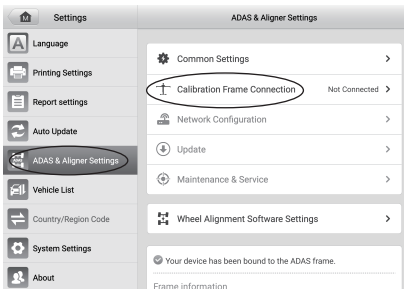

Tap the **ADAS & Aligner Settings** option on the left column. Select the **Calibration Frame Connection** option to display the Calibration Frame Connection screen.

3

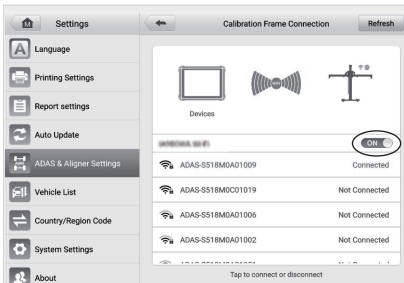


Swipe the Wi-Fi toggle switch to enable calibration frame Wi-Fi. The tablet will search for available units. The Wi-Fi name of the calibration frame will be "ADAS," suffixed with a serial number. Tap the appropriate unit to connect. When a connection is established, the connection status reads "Connected."



NOTE: It may take up to 30 seconds to connect the tablet to a calibration frame. Please wait patiently.


Connect the MaxiSys Tablet to Your Wi-Fi Network

1

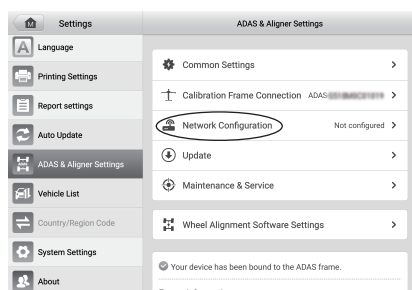


Tap **Settings > ADAS & Aligner Settings**, then select **Network Configuration** to enter the Network Configuration screen.

2

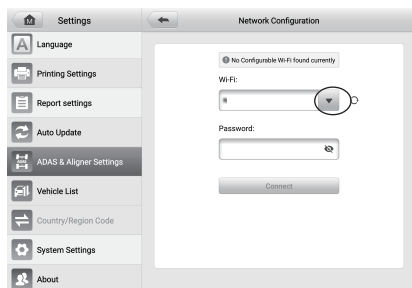

Tap the dropdown list. Select your Wi-Fi network and enter your password when prompted.

3

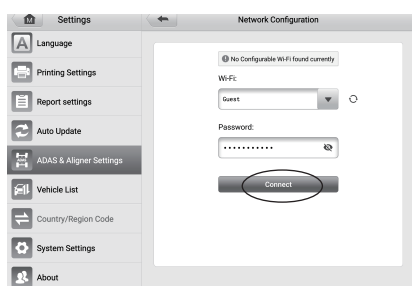

Tap the **Connect** button to connect to the selected Wi-Fi network. Once connected successfully, a confirmation message will appear.

NOTE: The illustrations in this Quick Reference Guide are for reference only. The actual screens may differ.